
Dayton 3KR84 Hydraulic Unit

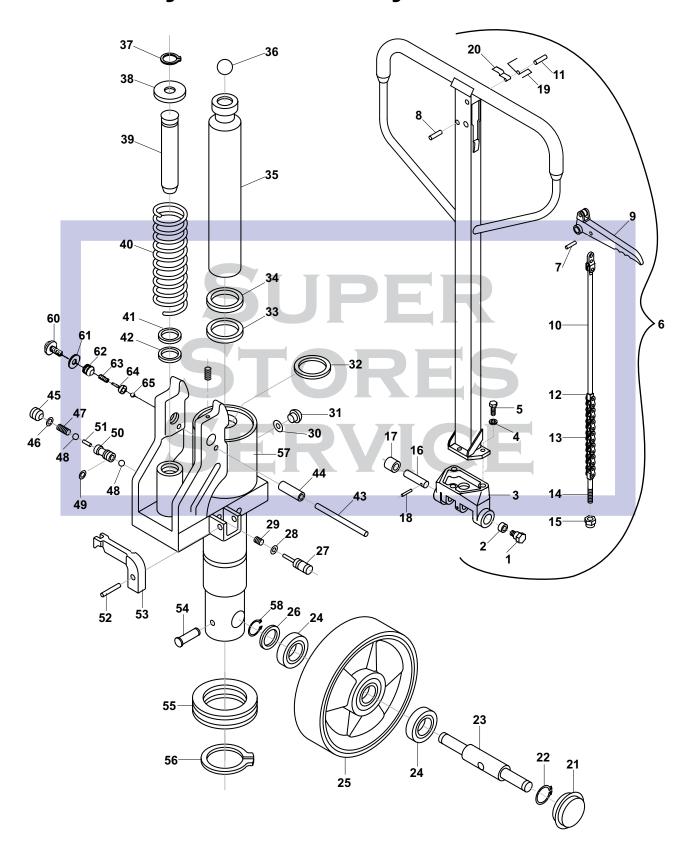

Dayton 3KR84 Hydraulic Unit

ltem	Part No.	Description
	PM-1HB	Shoulder Bolt
	PM-2HB	Bushing
}	PM-3HB	Handle Bracket
ļ	PM-4HB	Lock Washer
5	PM-5HB	Bolt
6	PM-6HB	Handle Frame
	PM-HCA	Handle Assembly
7	PM-7HB	Roll Pin
3	PM-8HB	Roll Pin
)	РМ-9НВ	Control Lever
	PM-CLK	Control Linkage Assembly,
		Includes Items 7,9,10, 12-15
10	PM-11HB	Control Rod
1	PM-12HB	Roll Pin
12		Pin, Chain Link
13	PM-14HB	Chain
L4	PM-15HB	Ajustment Pin
15	PM-16HB	Ajustment Nut
16	PM-17HB	Pin, Pressure Roller
L7	PM-18HB	Pressure Roller
18	PM-19HB	Roll Pin
L9	PM-20HB	Spring
20	PM-21HB	Spring Plate
21	PM-1P	Hub Cap
22	PM-2P	Snap Ring
23	PM-3P	Axle
24	PM-4P	Bearing
25	PM-5P	Steer Wheel Assembly, Black Poly on
		Nylon Hub, W/Bearings
26	PM-6P	Washer
27	PM-7P	Release Pin
28 A	PM-8P	0-ring
29	PM-9P	Spring
30 A	PM-10P	Nylon Washer
31	PM-11P	Srew Plug
32 A	PM-12P	U-cup

Item		Part No.	Description	
33	Α	PM-13P	U-cup	
34	Α	PM-14P	Wiper	
35		PM-15P	Lift Ram	
36		PM-16P	Ball	
37		PM-17P	Snap Ring	
38		PM-18P	Spring Cap	
39		PM-19P	Pump Piston	
40		PM-20P	Spring	
41	Α	PM-21P	Wiper	
42	Α	PM-22P	U-cup	
43		PM-23P	Roll Pin	
44		PM-24P	Chain Roller	
45		PM-25P	Valve Plug	
46	Α	PM-26P	O-ring	
47		PM-27P	Spring	
48		PM-28P	Valve Ball	
49	Α	PM-29P	O-ring	
50		PM-30P	Ball	
51		PM-31P	Pin	
52		PM-32P	Roll Pin	
53		PM-33P	Release Lever	
54		PM-34P	Pivot Pin	
55		PM-35P	Thrust Bearing	
56		PM-36P	Snap Ring	
57		PM-37P	Hydraulic Pump Assembly, Rebuilt	
58		PM-38P	Snap Ring	
59		PM-39P	Set Screw	
60		PM-41P	Adjustment Bolt	
61		PM-42P	Overload Spring	
62		PM-43P	Plunger	
63		PM-44P	Check Ball	
64		PM-45P	Plug Bolt	
65		PM-46P	0-ring	
Kit A		PM-SK	Seal Kit	