


# Tools

Part No.	Description	Used to Repair (Brand and Model)
TL 1/8 Punch	1/8" by 8" Pin Punch	All Models
TL 3/16 Punch	3/16" by 8" Pin Punch	All Models
TL 1/4 Punch	1/4" by 8" Pin Punch	All Models
TL 5/16 Punch	5/16" by 8" Pin Punch	BI BS-55; BT L 2000 and L 2000-U; CR PTH; MU TM, J and M
TL 3/8 Punch	3/8" by 8" Pin Punch	All Models
TL 6/45 SRP	6" Snap Ring Pliers, 45°	All Models Except Blue Giant and Pallet Mule
TL 9/45 SRP	9.5" Snap Ring Pliers, 45°	All Models Except Blue Giant and Pallet Mule
TL 9/90 SRP	9.5" Snap Ring Pliers, 90°	All Models
TL Allen 3mm	Allen Wrench, 3mm	CR PTH50
TL Allen 3/16"	Allen Wrench, 3/16"	MO ML55
TL Allen 1/4"	Allen Wrench, 1/4"	Rol-Lift T and E Series
TL Allen 5/16"	Allen Wrench, 5/16"	All Models
TL Allen 1/2"	Allen Wrench, 1/2"	LF L-50
TL Ernie	Axle Diameter Gauge	All Models
TL BUBG	Blue Giant Bushing Extractor	All Blue Giant Models
TL BUBT	BT Bushing Extractor	All BT Models
TL BUCR	Crown Bushing Extractor	All Crown Models
CR BHT	Crown Ball Housing Tool	All Crown Models
TL Philips	Screwdriver, Philips	BT L 2000 and L 2300
TL IT-150	Rod Seal Installation Tool	All Models With Rod Seals
TL TOOL KIT-GPS	Tool Kit	All Models

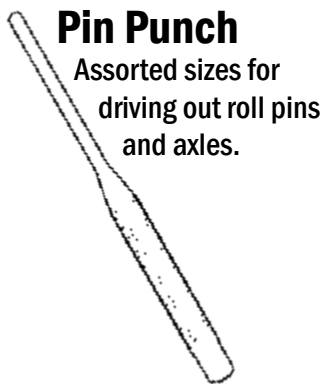

## Pin Punch

Assorted sizes for driving out roll pins and axles.




## Bushing Extractor

For Blue Giant, BT and Crown - drives out all bushings for each brand.

## Ernie

Measures axle diameter quickly and accurately; specifies metric and standard.

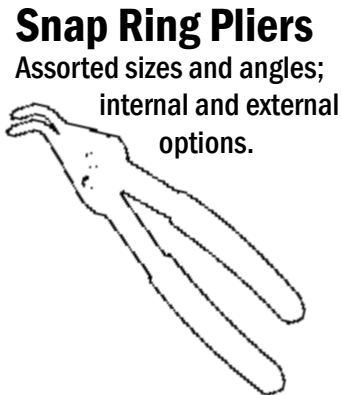

## Snap Ring Pliers

Assorted sizes and angles; internal and external options.

## Ball Housing Tool

For Crown PTH and PTH50 pallet jacks - won't damage threads or ball housing groove.

